CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Overview

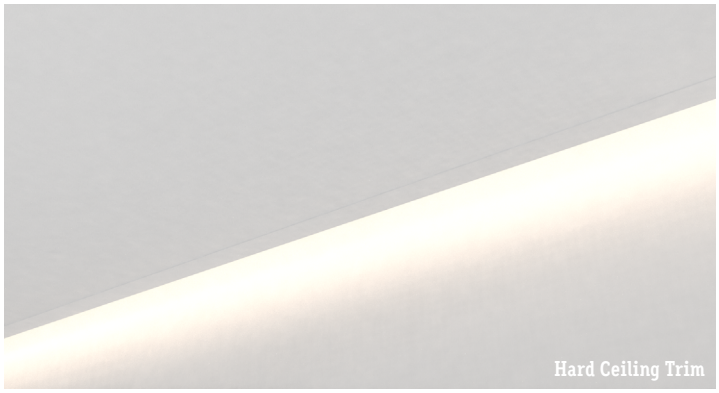

GENERAL FEATURES

APPLICATIONS	Indirect Lighting
LENS	Clear
LENGTH	Built to Order (+/- .25" Tolerance)
CONSTRUCTION	Aluminum Extrusion
FINISH	White
WEIGHT	4.50 lbs per foot
MOUNTING	Mounting Brackets or Aircraft Cable (Sold Separately)
LISTING	Dry or Damp Location UL1598, CSA C22.2#250.0 UL8750, CSA250 UL2108, 67.1.9, 60.4, CSA C22.2 #9
DRIVER	Driver on Board or Remote Driver
CLOSET RATING	Up to 3.6 Watts per Foot Maximum
TEMPERATURE RATINGS	**Operating / Startup:** -20° to 48°C (-4° to 120°F)
	Storage: -40° to 76°C (-40° to 170°F)
FG INSTALLATION	Link to Installation Instructions
TB INSTALLATION	Link to Installation Instructions
HC INSTALLATION	Link to Installation Instructions
MI INSTALLATION	Link to Installation Instructions

ELECTRICAL

DIMMING	0-10V, Lutron, DMX, DALI
MAXIMUM RUN (Class 2 Applications)	21' **(4W)**, 17' **(5W)**, 14' **(6W)**, 10' **(8W)**, 7' **(12W)**
LUMINAIRE VOLTAGE	120V - 277V **(UNV)**

READ ENTIRE GUIDE BEFORE STARTING INSTALLATION

IMPORTANT NOTICE: VERIFY CORRECT LUMINAIRE WAS RECEIVED WITH CORRECT COLOR TEMPERATURE, VOLTAGE, AND WATTAGE BEFORE CUTTING OR INSTALLING. CALI WILL NOT BE RESPONSIBLE IF INCORRECT LUMINAIRE IS INSTALLED.

END VIEWS / DIMENSIONS

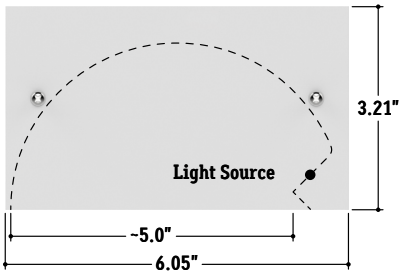

Note: End view dimensions do not include ceiling trims or mounting options.
Refer to trim-specific installation instructions for additional details.

PRODUCT INFORMATION

- Indirect lighting.
- 24 Volts DC for easy and safe installation .
- Long life, energy efficient LEDs.
- Available in 4 Watts up to 12 Watts Per Foot.
- Can be ordered to specific lengths for when exact dimensions are known.
  Example: 10 x 10'6". Product is shipped in luminaire segments up to 8' long.
- Available for indoor (DRY) and (DAMP) rated installations.

ELECTRICAL REQUIREMENTS

- Luminaires require a 24 Volt DC remote driver. The driver may be mounted on top of the luminaire or in a remote location. The driver must be placed in an accessible location. Do not place the driver on top of the luminaire if access will be restricted after installation.
- Drivers are 120V - 277V (UNV) Input Voltage and 24VDC Output Voltage.
- To calculate driver size, determine Watts per Foot.
  Example: 4W per Foot
- Determine Length in Feet.
  Example: 20'
- To calculate Load, Multiply Watts per Foot x Length in Feet.
  Example: 4W x 20'= 80W. The Load of the driver is 80 Watts.
- Maximum load for a Class 2 low voltage luminaire is 96 Watts

INSTALLATION RECOMMENDATIONS

- AlumLEDs can be mounted to sheetrock, concrete, or wood using proper mounting screws
- All wiring is enclosed inside aluminum housing
- Provide run lengths at time of order

INSTALLATION TOOLS REQUIRED

- Electric Hammer Drill
- 14.4 to 28 Volt Cordless Drill
- Phillips Bits
- Utility Knife
- Electrical Cord
- Marker
- Wire Stripper
- Long Nose Pliers
- Drill Bits - Concrete or Wood
- Electrical Three Ways
- Safety Glasses
- Measuring Tape
- Chalk Line

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

WARNING

When using luminaires for any application, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury. Luminaires must be installed in accordance with the NEC or CEC as applicable. ALUZ will not be responsible for damage or malfunction caused by the following:

- Ensure power is off before installation begins, during replacements, additions, or repairs.
- Do not use luminaires if damaged, such as broken boards, loose connections, or frayed wire insulation. Inspect before installing.
- Do not install luminaires in hazardous locations.
- Do not cover luminaires with any material. Covering may cause LEDs to overheat, melt, or ignite.
- Do not paint on or over fixture lens or LEDs. Paint or any other substance on lens or LEDs will cause a shift in color temperature.
- Soffit must be evenly painted with a neutral white to avoid color shift.
- Do not modify luminaires in the field.
- Do not overlap luminaires in any way. **(Fig. 1)**
- Luminaires have line voltage risk of shock. Consult factory for any malfunctions. Do not attempt to repair.
- Only use luminaire with specified rated voltages. Do not exceed the specified voltage for any luminaire.
- Do not use extrusion as a raceway for additional wire. Non-factory feed through wires inside luminaire will void warranty.
- Ground Fault Circuit Interrupter (GFCI) protections should be provided on circuits or outlets when luminaire is used for outdoor applications.
- Surge protector must be set up for electrical power system to avoid damaging lighting system.
- Do not make wiring connections without referring to wiring diagrams.
- Do not cut wire while energized. **(Fig. 2)**
- Do not exceed maximum run lengths.
- Always follow sequence labeling for continuous runs. Continuous run segments are labeled in alphabetical order.
- Polarity of continuous run segments must be aligned.
- Do not assemble continuous runs prior to installing into mounting clips. Each segment must be installed one by one into mounting clips. The weight of the assembled segments will put strain on junctions, causing the board, pin, or terminals to break.
- Do not install continuous runs without a mounting clip at each junction between two segments.
- Do not secure luminaire with nails or like means that might damage the wiring inside. Only secure by using mounting clips.
- Do not mount luminaire inside tanks or enclosures of any kind.
- Do not install downward facing luminaires without set screws.
- Do not use improper screw head type on mounting clips. It will cause the mounting clip to open up and become dysfunctional.
- Do not modify mounting clips.
- Do not weld mounting clips to surface. Mounting clips must be mechanically attached with screws appropriate for mounting surface and weight of luminaire.
- Do not mount fixture with less than the minimum number of mounting clips required. See mounting clips section for details.
- Do not install mounting clips on uneven surfaces. Use shims to level out height of mounting clips if necessary.
- Do not install mounting clips after luminaires have been assembled. Install mounting clips first, then install luminaire into mounting clips.
- Do not force luminaire into a space that is too small.
- Do not force luminaire with cord grip into soffit. **(Fig. 3)**
- Do not install luminaire at an angle within a cove. Only install fixtures straight within a cove. **(Fig. 4)**
- Do not bend extrusion around radius.
- Do not submerge dry or wet location luminaire in any liquid.
- Do not install wet location in outdoor coves without proper drainage. **(Fig. 5)**
- Do not install luminaire in any area that is continuously exposed to flowing or pooling water, such as underneath drain pipes, sprinklers, fountains, misters, etc.
- Do not cut, puncture, or penetrate aluminum housing, end caps, or lens covers.
- Do not drop, bang, or rest weight upon luminaire.
- Do not apply excessive pressure to any part of luminaire.
- Do not remove end caps from luminaire.
- Do not bend power cord or continuous connector past permitted bend radius. Bending past permitted bend radius will break the seal of the cordgrip or damage the insulation. **(Fig. 6)**
  Wet Location: 3.5" minimum bend radius
  Dry Location: 1.5" minimum bend radius
- Do not install in places where the power cord is subject to continuous flexing.
- Do not twist continuous connector or power cord.
- Do not hold, carry, or suspend luminaire by the power cord.
- Do not install on ceilings without mounting clips and set screws. **(Fig. 7)**

FIGURES

Figure 1

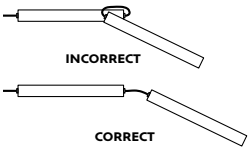

Figure 2

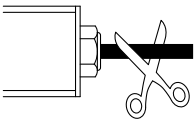

Figure 3

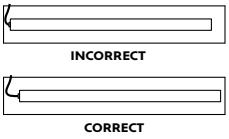

Figure 4

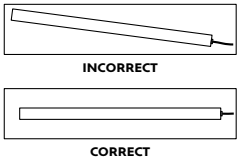

Figure 5



Figure 6

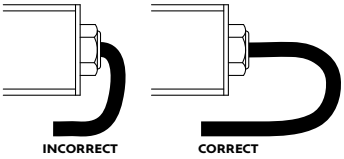

Figure 7

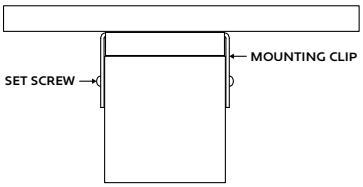

CLEANING MATERIALS

The use of solvents and/or cleaners which are not compatible with polycarbonate will result in the softening, crazing, and/or cracking of the plastic part. This is especially true of polycarbonate lamps and mounting bases which may be under stress in their normal applications.

COMPATIBLE WITH POLYCARBONATE

- Mild soap and water
- Mineral Spirits
- Isobutyl Alcohol
- VM and P Naphtha
- Varsol No.2
- Mexane
- Freone TF and TE-35
- Ethanol
- Dirtex
- 2% Sol. Reg. Joy
- 10% Sol Bon Ami
- White Kerosene
- Methyl Alcohol
- Heptane
- Petroleum Ether / 65°C
- Isopropyl Alcohol
- Lacryl PCL-2035 Polycarbonate Cleaner

NOT COMPATIBLE WITH POLYCARBONATE

- Trichlor
- Gasoline
- Liquid Detergents
- Acetone
- Carbon Tetrachloride
- Pink Lux (Phosphate free)
- Triclene
- Chlorinated Hydrocarbons
- #1 & #3 Denatured Alcohol
- Methyl Ethyl Keytone (MEK)
- Texize-8006, 8129, 8758
- MIBK
- Liquid Cleaner – 8211
- Toluol
- Agitene
- Benzol
- Ajax
- Kleenol Plastics
- Lysol
- Stanisol Naphtha
- Oils
- Lemon Joy (phosphate free)
- Diversol
- Lestoil

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Design Guidelines

DESIGN GUIDELINES

Individual Run

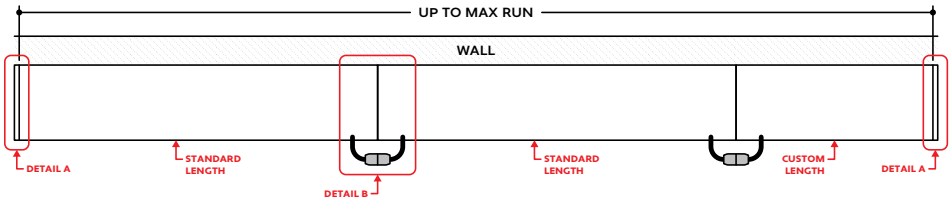

Run with Mitered Corners

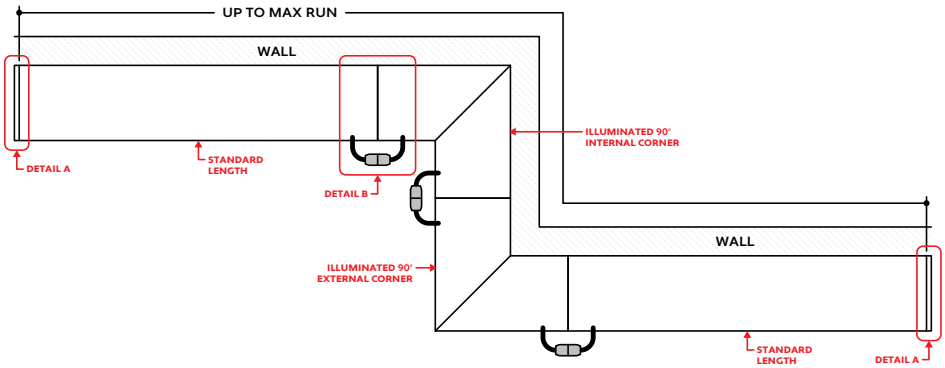

Run with Jumper Cables

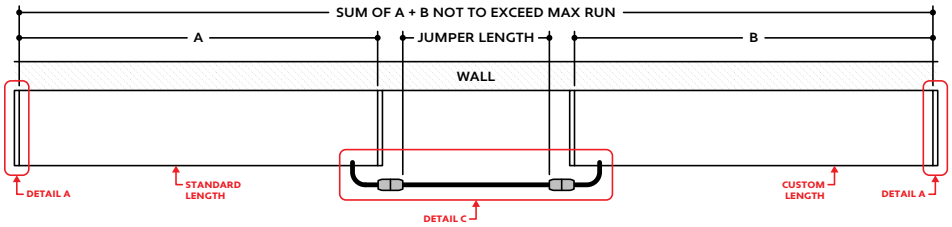

Continuous Run Exceeding Maximum Run

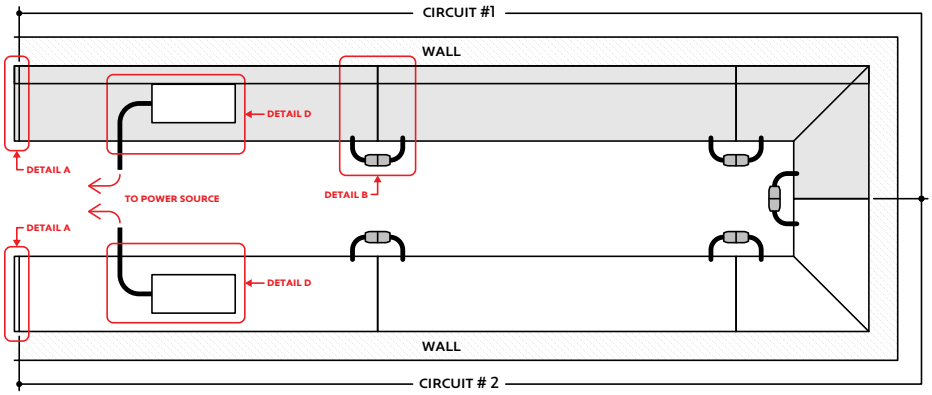

KEY

DETAIL A	**End Cap:** An end cap is used to terminate each run at either end.
DETAIL B	**Continuous Connection:** Luminaire segments are connected using an included continuous connector. See installation instructions for details.
DETAIL C	**Continuous Connector (Jumper):** Used to span a corner or traverse a gap, corner, or obstacle in the installation area.
DETAIL D	**Remote Driver:** For T-Bar ceiling grid applications, the driver may be mounted on top of the luminaire. See installation instructions for details.

Note: Drawings not to scale. Product may differ from examples shown.

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Diagram of Assembly (Hanging Bracket Assembly)

DIAGRAM OF ASSEMBLY

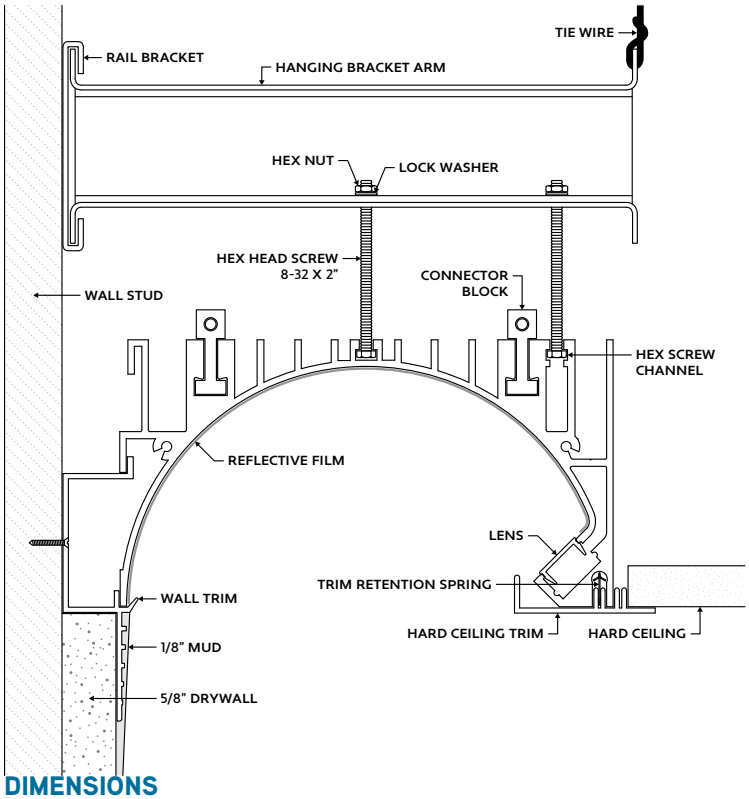

DIMENSIONS

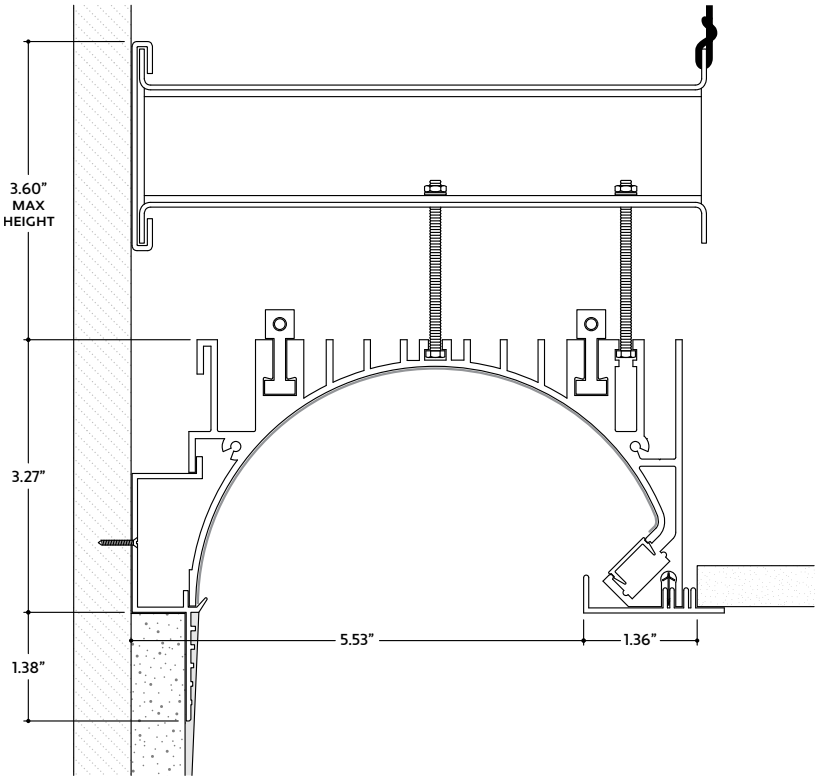

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Mounting (Hanging Bracket Assembly) 1 of 2

1 Install concealed ceiling system grid. Assemble the grid so there is a continuous 6-15/16" opening where luminaires will be installed. The installation area must have at least 10" of overhead space from ceiling line.
Note: Do not hang ceiling drywall before luminaires are installed. Luminaires must be mounted prior to installation of ceiling drywall to allow top access.

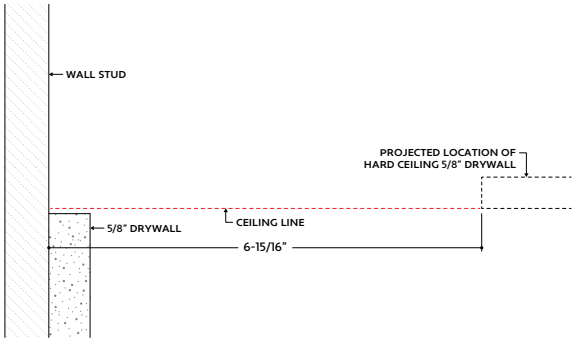

2 Hang or cut drywall along installation area so it is 1/16" above ceiling line. Measure exactly 4" above ceiling line and mark each wall stud in the installation area. Use a laser level to ensure accurate relation to ceiling line, then draw a reference line connecting each mark along the wall studs.
Note: Drywallers must hang drywall to the specifications. Only cut if necessary.

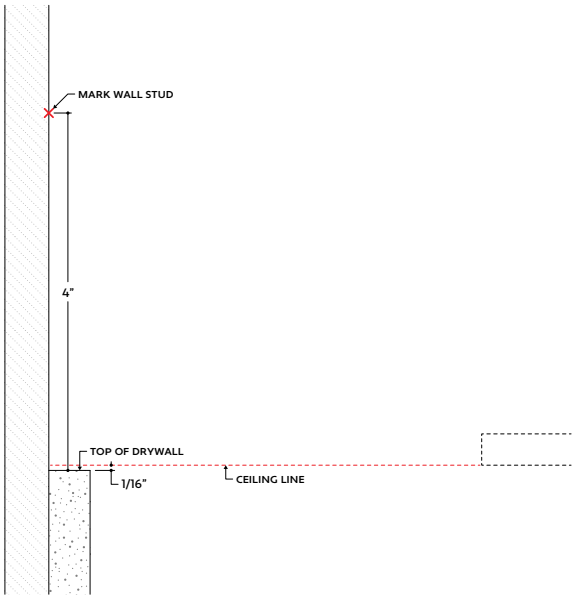

3 Mark locations along Wall Trim extrusion where it will be mounted to wall studs, then drill holes as needed and mount to wall studs.
Note: Mount Wall Trim extrusion using at least 1 screw per 2', rounded up.

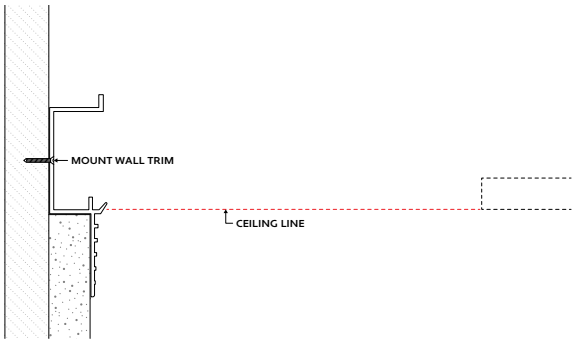

4 Determine number of Hanging Brackets required.
Note: Refer to Spacing Diagrams (Hanging Bracket Assembly) for details.

5 If applicable, assemble Hanging Bracket Arms. Insert Hex Head Bolts through slots on Hanging Bracket Arms and secure with washers and hex nuts.

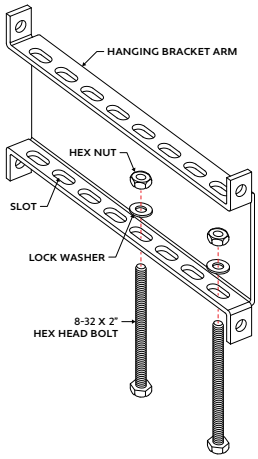

6 Mark locations where each Rail Bracket will be installed along reference line. Align the bottom of the Rail Bracket with the reference line and pre-drill using proper drill bit for surface and screw size. Each rail must be mounted with a minimum of two screws. Drill additional holes in Rail Brackets if necessary.
Note: Use 8/32 x 2" Countersink Screw (By others)

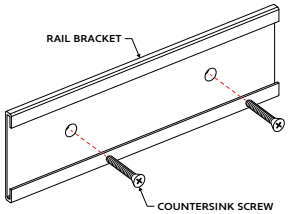

7 Install Hanging Bracket Arms to luminaire by sliding inverted Hex Head Bolts of Hanging Bracket into the channels pictured below. Do not slide into any other channels.

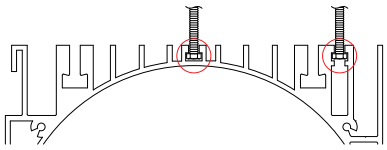

8 If applicable, install end caps to ends of runs.

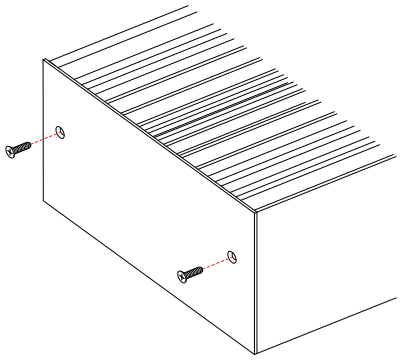

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com
© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Mounting (Hanging Bracket Assembly) 2 of 2

9 Mount luminaire to Rail Brackets by sliding luminaire with assembled Hanging Bracket Arms into Rail Brackets. Ensure each Hanging Bracket rests at the center of each Rail Bracket.
Note: All Hex Head Bolts must be vertical after mounting luminaire. If bolts are crooked or slanted, the Hanging Bracket must be adjusted.

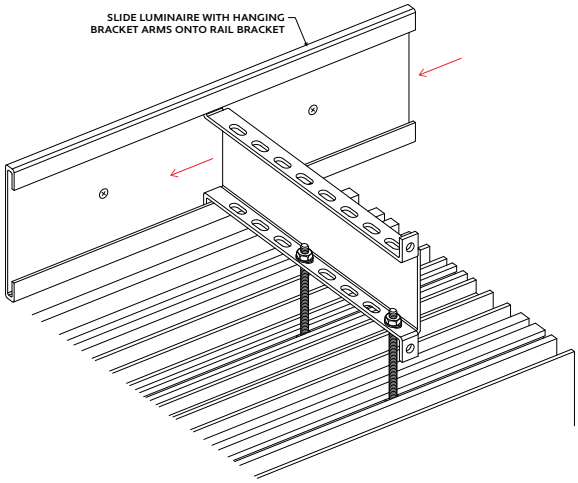

10 Secure connections between continuous runs using Connector Blocks after all luminaires have been mounted.
Note: Refer to Connecting Continuous Runs for details.

11 Install Ceiling Trim after all runs have been mounted and connected.
Note: Refer to Installing Ceiling Trim for details.

12 After all luminaires are mounted, adjust height and levelness of each luminaire by tightening or loosening hex nuts on Hanging Bracket assembly. Use a dummy piece of drywall to perfect the height at which the luminaires will rest. The drywall will be tucked into the gap between the Hard Ceiling Trim and the concealed ceiling grid when hung.
Note: One person holds the luminaire and another person adjusts hex nuts.

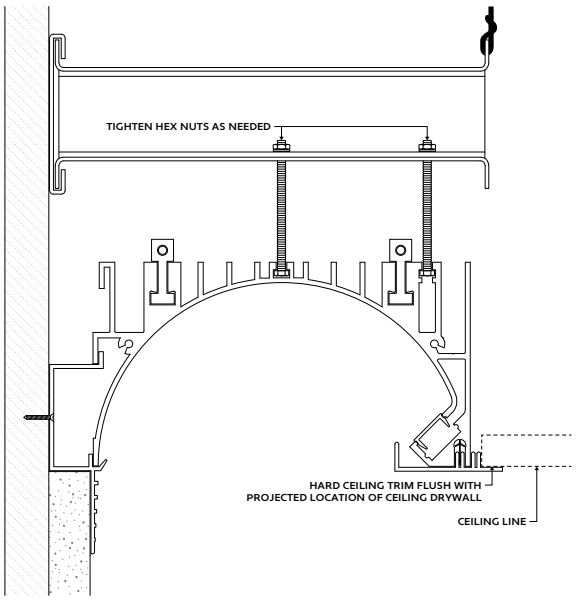

13 Secure a tie wire to each Hanging Bracket Arm after luminaires are set in place.
Note: Refer to Diagram of Assembly for details.

14 Mount drivers in remote location where they are easily accessible, such as an electrical panel box in a control room.

15 Make wiring connections from driver to 1st PCB. Pull lead wires from luminaire and make splice connections to lead wires from driver. Verify wiring diagram before connecting.

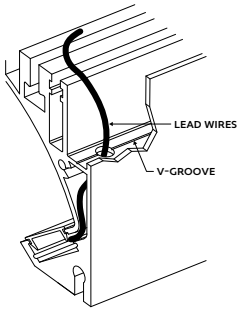

16 Perform a continuity test before connecting luminaire to power source.

17 Verify driver wire colors from wiring diagram, then connect luminaires to power source. Drivers used for this product vary. Always confirm wiring diagram from driver installation instructions before connecting.

18 Apply mud to Wall Trim until completely covered and smooth. Allow mud to dry completely before painting or sanding. Do not use pre-mixed mud compounds.

19 After all installation steps are complete and lighting is confirmed to be working, install reflective film to runs.
Note: Refer to Installing Reflective Film for details.

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com
© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Diagram of Assembly (Aircraft Cable Assembly)

DIAGRAM OF ASSEMBLY

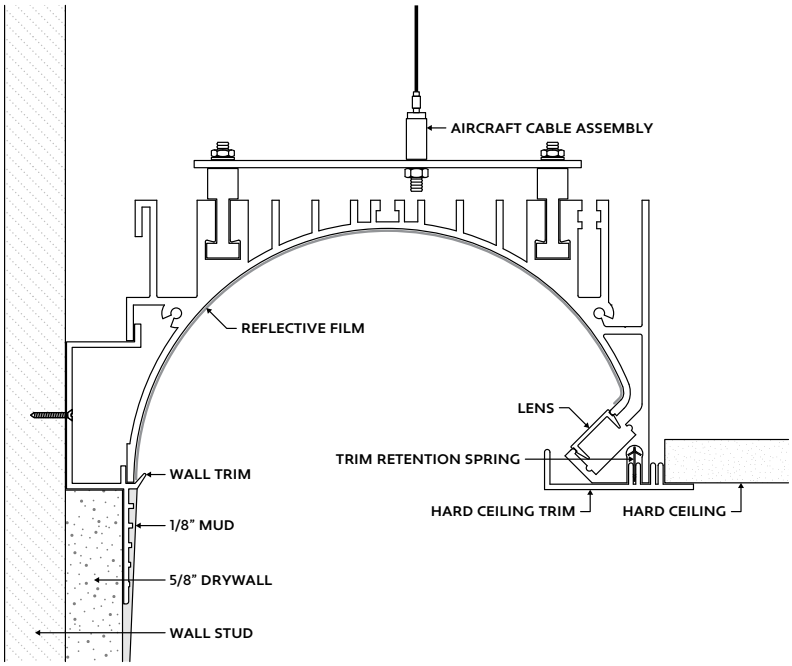

DIMENSIONS

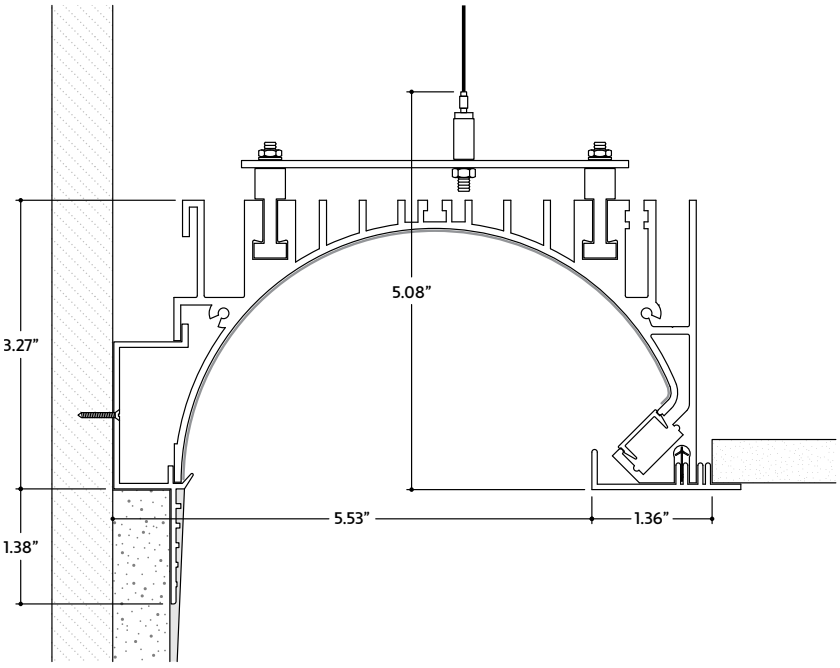

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Mounting (Aircraft Cable Assembly) 1 of 2

1 Install concealed ceiling system grid. Assemble the grid so there is a continuous 6-15/16" opening where luminaires will be installed. The installation area must have at least 10" of overhead space from ceiling line.
Note: Do not hang ceiling drywall before luminaires are installed. Luminaires must be mounted prior to installation of ceiling drywall to allow top access.

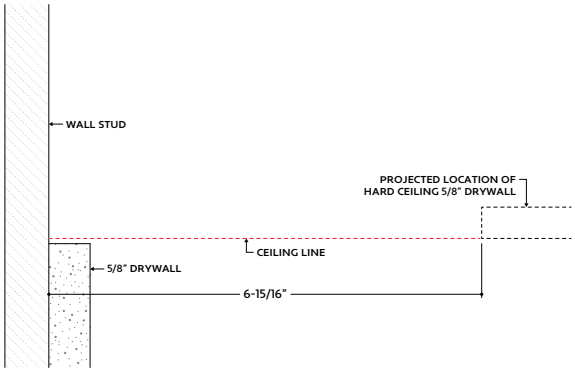

2 Hang or cut drywall along installation area so it is 1/16" above ceiling line.
Note: Drywallers must hang drywall to the specifications. Only cut if necessary.

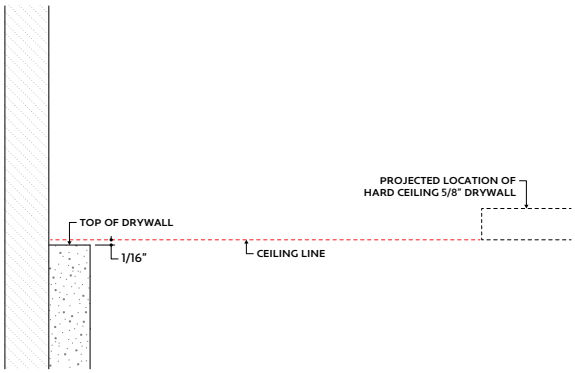

3 Mark locations along Wall Trim extrusion where it will be mounted to wall studs, then drill holes as needed and mount to wall studs.
Note: Mount Wall Trim extrusion using at least 1 screw per 2', rounded up.

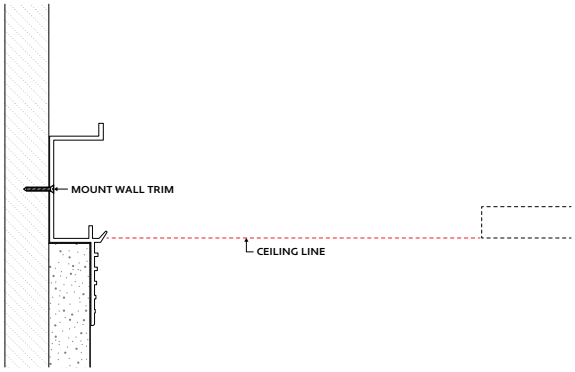

4 Determine number of Aircraft Cable Assemblies required.
Note: Refer to Spacing Diagrams (Aircraft Cable Assembly) for details.

5 If applicable, assemble Aircraft Cable Assemblies. Use provided hardware to secure Alignment Blocks and Cable Gripper to Flat Bracket.

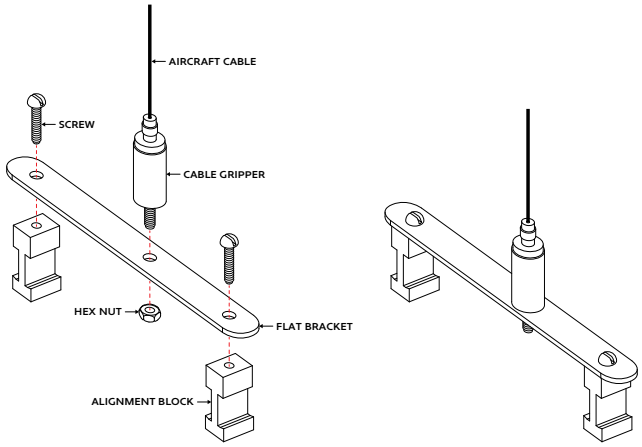

6 If applicable, assemble Aircraft Cable Assemblies. Use provided hardware to secure Alignment Blocks and Cable Gripper to Flat Bracket.

7 Determine locations where Aircraft Cables will be mounted overhead. Secure to a sturdy surface, such as studs, using hardware (by others) that is rated for the weight of the luminaire. Ensure each luminaire is appropriately balanced.
Note: Do not hang luminaire from weak material such as drywall or plywood.

8 Secure Aircraft Cable Assemblies to mounting surface. The top of the assembly should rest approximately 5" above ceiling line. Adjust position of assembly along aircraft cable using cable gripper. Do not trim excess cable at this time.

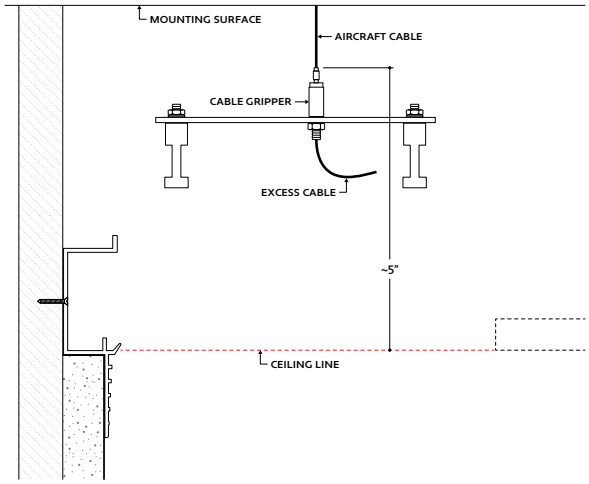

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com
© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Mounting (Aircraft Cable Assembly) 2 of 2

9 Adjust Cable Gripper by unscrewing locking mechanism. Press down and hold the threads where cable feeds through. Pull cable from the exit. Let go of threads to lock in place, then replace locking mechanism.

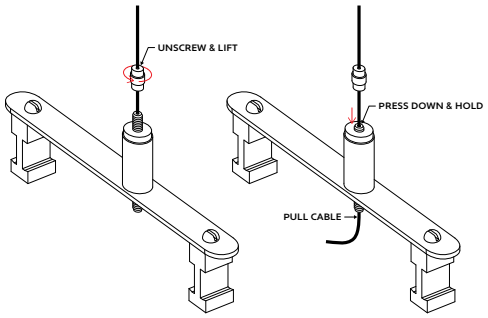

10 Slide luminaires onto Aircraft Cable Assemblies. Remove Connector Blocks if applicable. Replace after Aircraft Cable Assemblies are installed. Always install corner luminaires first.

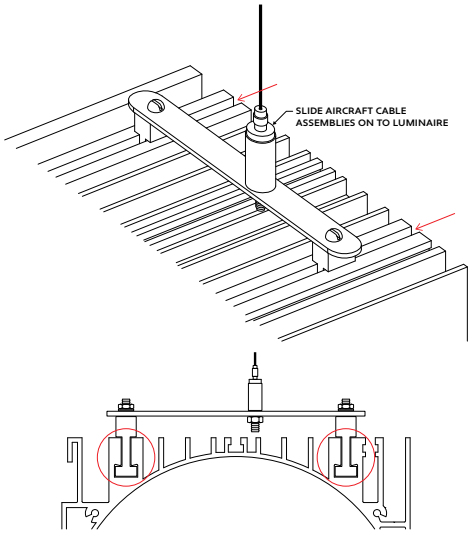

11 If applicable, install end cap to end of run.

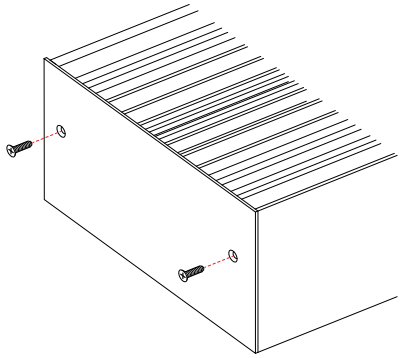

12 All aircraft cables must rest in a vertical position. Do not allow aircraft cables to rest at a slant or angle. Adjust as needed.
Note: The position of the Aircraft Cable Assemblies may deviate from the spacing diagrams due to variations within the installation area. Ensure all luminaires are appropriately balanced.

13 Secure connections between continuous runs using Connector Blocks after all luminaires have been mounted.
Note: Refer to Connecting Continuous Runs for details.

14 Install Ceiling Trim after all luminaires have been mounted and connected.
Note: Refer to Installing Ceiling Trim for details.

15 After all luminaires are mounted, adjust height and levelness of each luminaire by adjusting cable gripper. Use a dummy piece of drywall to perfect the height at which the luminaires will rest. The drywall will be tucked into the gap between the Hard Ceiling Trim and the concealed ceiling grid when hung.
Note: One person holds the luminaire and another person adjusts cable gripper.

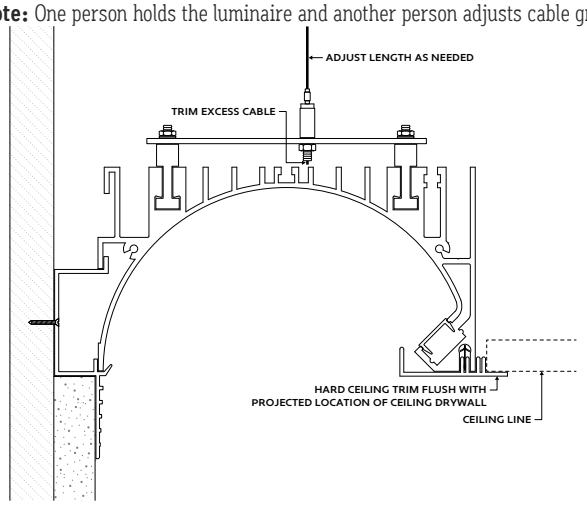

16 Mount drivers in remote location where they are easily accessible, such as an electrical panel box in a control room.

17 Make wiring connections from driver to 1st PCB. Pull lead wires from luminaire and make splice connections to lead wires from driver. Verify wiring diagram before connecting.

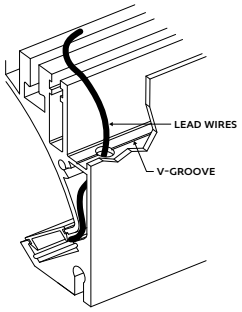

18 Perform a continuity test before connecting luminaire to power source.

19 Verify driver wire colors from wiring diagram, then connect luminaires to power source. Drivers used for this product vary. Always confirm wiring diagram from driver installation instructions before connecting.

20 Apply mud to Wall Trim until completely covered and smooth. Allow mud to dry completely before painting or sanding. Do not use pre-mixed mud compounds.

21 After all installation steps are complete and lighting is confirmed to be working, install reflective film to runs.
Note: Refer to Installing Reflective Film for details.

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Spacing Diagrams (Hanging Bracket Assembly)

1' LUMINAIRE

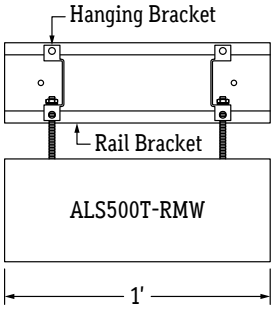

- For luminaires 1' long, use 1 Rail Bracket and 2 Hanging Brackets.
- Install 2 Hanging Brackets, 2" from each end of 1 Rail Bracket.
- Align the 1' Rail Bracket with the 1' luminaire.

2' - 5' LUMINAIRE

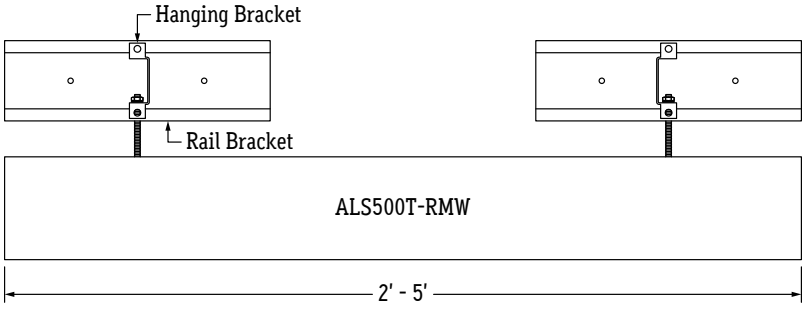

- For luminaires 2' - 5' long, use 2 Rail Brackets and 2 Hanging Brackets.
- Install 1 Hanging Bracket in the center of each Rail Bracket.
- Align the Rail Brackets with the end of the luminaire.

6' - 8' LUMINAIRE

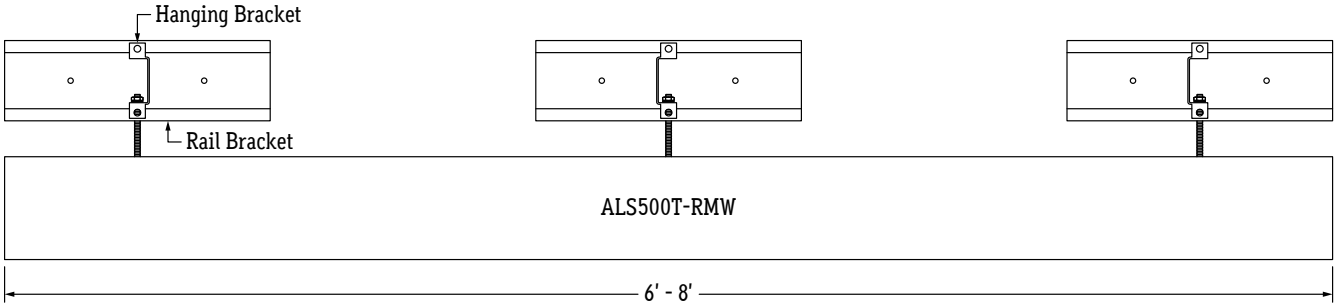

- For luminaires 6' - 8' long, use 3 Rail Brackets and 3 Hanging Brackets.
- Install 1 Hanging Bracket in the center of each Rail Bracket.
- Align each Rail Bracket with the center and ends of fixture.

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Spacing Diagrams (Aircraft Cable Assembly)

1' - 5' LUMINAIRE

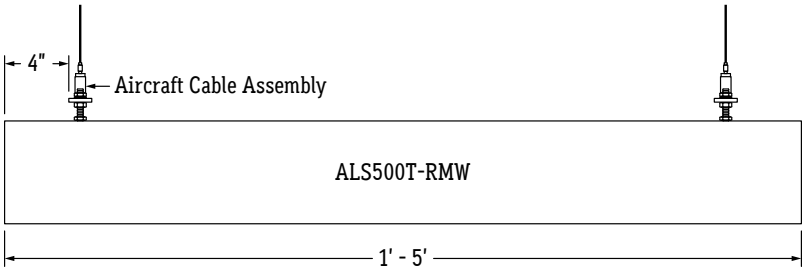

- For luminaires 1' - 5' long, use 2 Aircraft Cable Assemblies per luminaire.
- Install each assembly about 4" from each end of luminaire.

Note: Location may vary depending on accessibility mounting surfaces. Ensure each luminaire is balanced.

6' - 8' LUMINAIRE

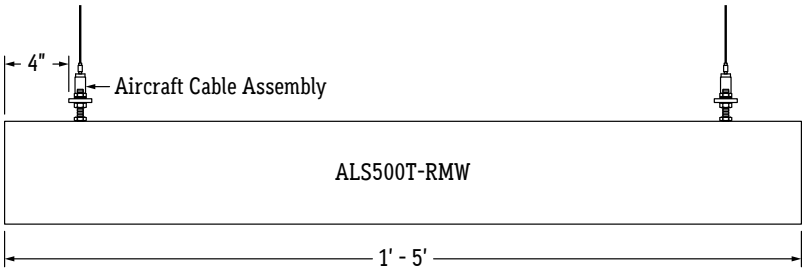

- For luminaires 6' - 8' long, use 3 Aircraft Cable Assemblies per luminaire.
- Install 1 assembly centered and 2 assemblies about 4" from each end of luminaire.

Note: Location may vary depending on accessibility mounting surfaces. Ensure each luminaire is balanced.

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com
© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Connecting Continuous Runs

1 Make cuts to extrusion and lens if necessary. Do not cut PCB, wiring, or accessories. Only use a miter saw equipped with a blade for cutting metal.
Note: If applicable, remove Connector Blocks before cutting.

2 If applicable, insert one Allen Screw with Lock Washer into each Male Block.
Note: Ensure sequence labeling is in the correct sequence (A, B, C, and so on.)

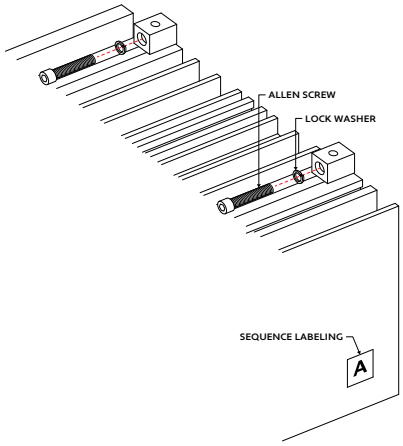

3 Position luminaires together and align the screw of the Male Block to meet the Female Block. Tighten Allen Screws using provided Allen Wrench to close the gap until luminaires meet. Only tighten screws until extrusion edges meet with no gaps. Over-tightening screws will create separation at the seam.
Tip: One person holds the luminaire together, ensuring there is no gap, while another person tightens screws.

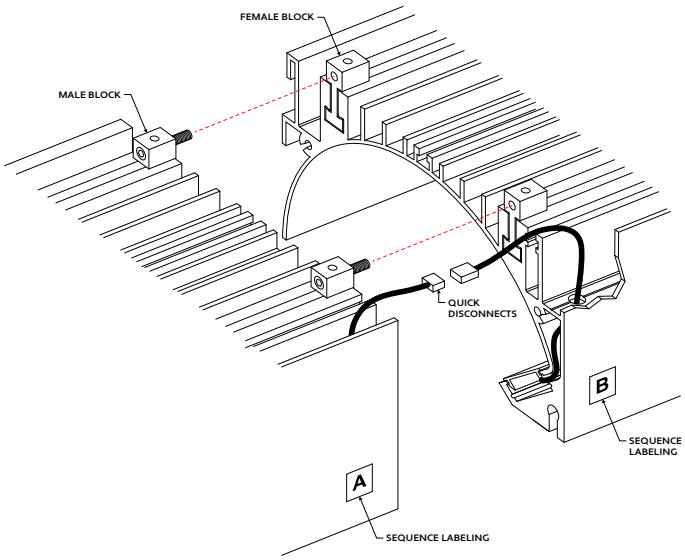

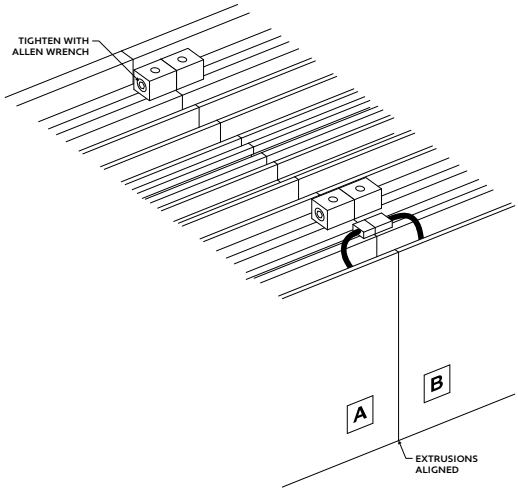

4 Connect disconnects between luminaires, if applicable. Ensure connected runs do not exceed load of power supply.
Note: Refer to Electrical section on first page for details on calculating load.

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Installing Ceiling Trim

1 Measure installation area to determine required lengths of Ceiling Trim.
Example: 16' required two 8' sections of Ceiling Trim.

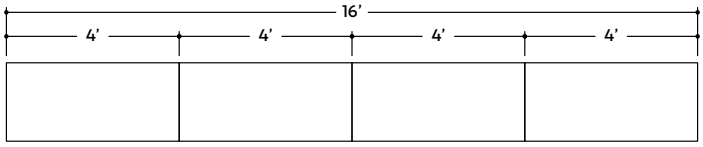

2 Measure and cut a 2' section from one of the Ceiling Trim segments.



3 Install Trim Retention Springs to ceiling trim. Use one clip per 2', or two clips per segment under 4'. Install clips 4" from each edge, evenly spaced.

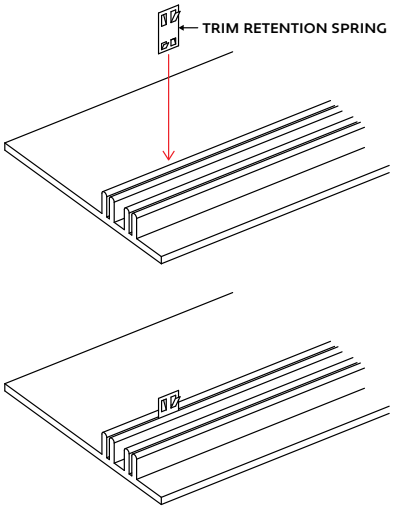

4 Install Ceiling Trim with Trim Retention Springs to mounted luminaires. Ensure all springs snap into channel and that trim is not loose or sagging.
Note: Place trim pieces carefully, they can not be removed after installing.
Note: Ensure placement Trim Retention Springs is at least 4" from edges of luminaire where wiring is present.

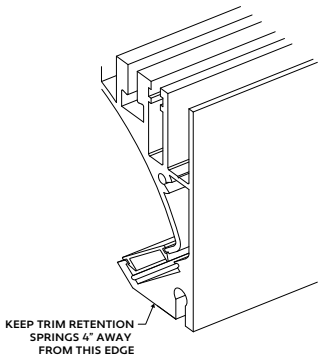

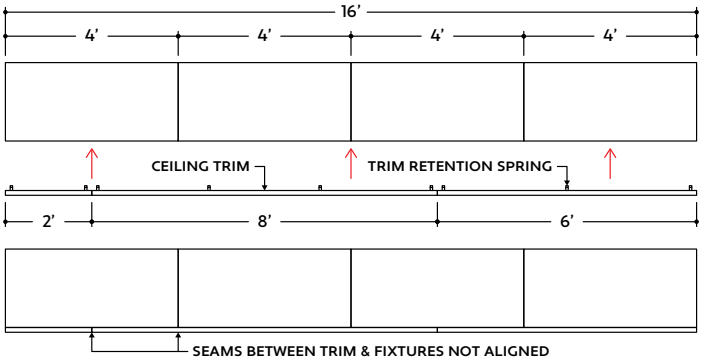

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com
© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Installing Reflective Film (ALS500T-RMW-RF)

INSTALLATION GUIDELINES

- Follow the below diagrams and steps if applicable to your installation.
- Only install Reflective Film after all other installation requirements are complete. Lighting must be tested and in working order, and wall must be mudded, painted, and completely dry before beginning.
- Reflective Film requires a minimum of two installers to ensure a secure and correct installation.
- Use a puller stand to prevent damage to the film while installing.
- Installers must wear gloves while handling Reflective Film.
- The Reflective Film is two-sided. Place the textured side facing downward. The smooth side should only be facing upward.

FEATURES & MAINTENANCE

- Stable in humid environments
- Anti-static
- Abrasion resistant
- Continuous thermal stability up to 100°C
- Compatible with the following cleaning solutions: dilute ammonia, soap solutions, Clorox Wipes, Pine-Sol, and Formula 409

SPECIFICATIONS

Reflectance @ 550nm	97.5 +/- 0.8% (ASTM E1164)
L* Value	> 98.9 (ASTM E308)
A Value	-0.35 +/- 0.25 (ASTM E308)
B Value	0.90 +/- 0.30 (ASTM E308)
Gloss (60°)	< 5.0% (ASTM D2456)
Thickness	205 um +/- 15 (Ono Sokki EG225)
Tensile Strength	165 MPa (ASTM D882)
Deformation Temperature	130°C (JIS K7196-1991)
Melt Temperature	255°C (ASTM D3418)
UL Relative Thermal Index	105°C (UL746)

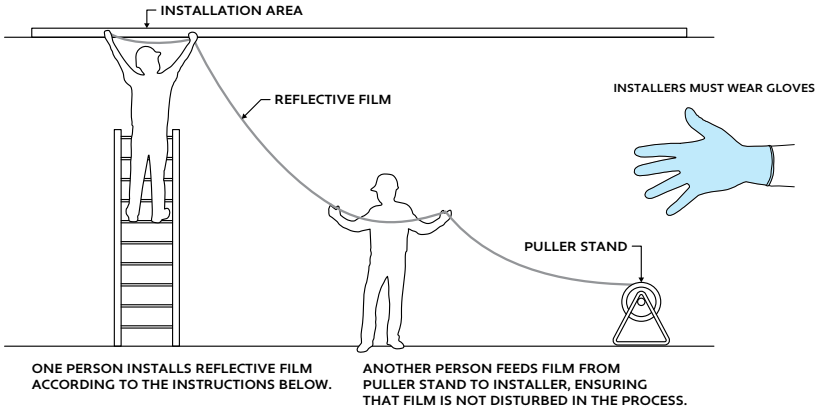

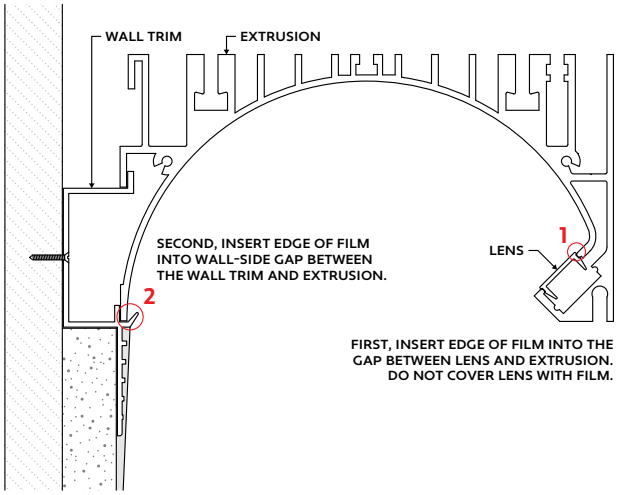

1 Cut a 1' section of Reflective Film and practice installing to get a feeling for how it bends and forms in the luminaire. The film cannot be corrected if it is bent, folded, wrinkled, or kinked during installation.

2 If applicable, cut the end of the sheet so it has a smooth and even edge.
Tip: Use a tool to ensure an accurate cut.

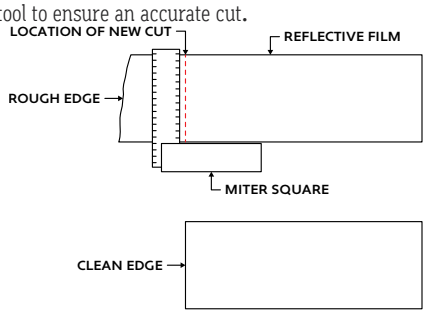

3 Place roll of Reflective Film onto wire puller stand. Gently pull film from roll and feed to installer as needed. Check that the textured side is facing downward when pulling.

4 Place beginning edge all the way to the end, so the edge of the film sits flush to the end cap.

5 At the end of the run, estimate how much more film will be needed. Make small cuts at the end of the film and test fit it. Repeat if necessary until the film meets the end cap flush.

6 Check along entire run that Reflective Film is installed correctly. Ensure lens is not covered by film and that it is securely tucked into each edge along the run.

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.

CALI CALIFORNIA ACCENT LIGHTING INC

ALS500T-RMW-HC | INSTALLATION

Troubleshooting & Continuity Test

TROUBLESHOOTING TIPS

- Do not reset the breaker multiple times
- If the unit is overloaded, the breaker will trip, shutting off the transformer and lights
- If the breaker reset button has been held down by hand or any type of pressure, such as duct tape, or if the breaker has been reset multiple times without troubleshooting, the unit will:
  - Burn the transformer bobbin
  - Burn the thermal or magnetic breaker
  - Burn the primary or secondary wires due to high amperage caused by overload
  - Short circuit in line which will not allow the breaker to reset
  - Damage the lighting

1. Turn off power before beginning. Check for any damage to the circuit in the LED board. If there is excessive damage and the circuit is broken, the board must be replaced.

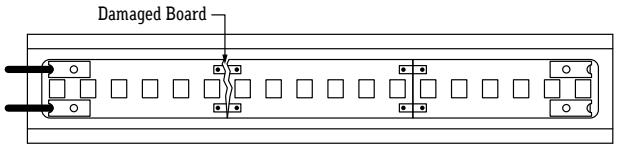

2. Check for metal particles or other foreign objects causing the short.

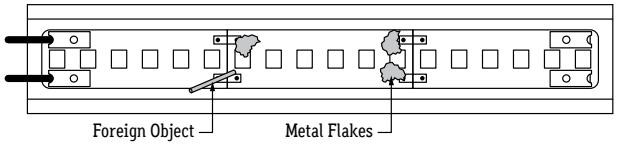

3. Check to make sure cuts in the board are clean. Poor quality cuts to the LED board will cause damage to the circuit, resulting in dim, flickering, or lightless LEDs.

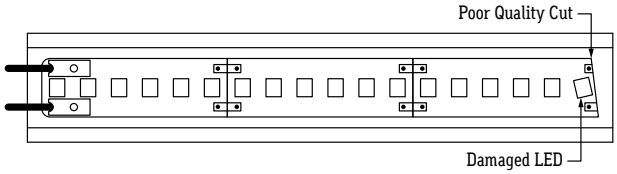

4. Check connections between LED terminals and, if applicable, check soldered connections.

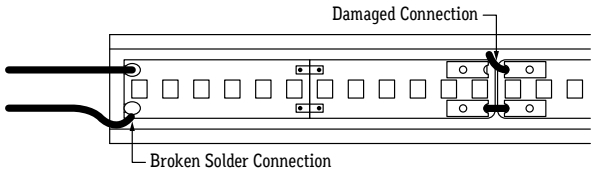

CONTINUITY TEST

A continuity test is performed to determine if electricity can pass through two points on an electrical circuit. This helps identify shorts or malfunctions in the line or fixture. Use a multimeter or continuity tester to perform the steps below.

- Always perform a continuity test before connecting lighting to power source.
- Malfunctions are not always as obvious as the lights not turning on.
- A short or malfunction in the line or fixture will cause damage over time, ultimately damaging the lighting and voiding warranty.

1. Turn power off before beginning. Verify power is turned off by using a non-contact circuit tester. Touch the probe of the tester to positive wire of the power source. The tester will light up if an electrical current is detected.

2. Setup your tester. First insert the black probe lead into the COM jack, then insert the red probe lead into the VΩ jack.



3. Verify that your tester is functional by touching probes together. The tester should light up, beep, or read 0Ω (ohms) of resistance.

4. Touch the red probe to the positive (+) wire and the black probe to the negative (-) wire. If a conductive path is formed between the positive and negative wires, the multimeter will beep, flash, or read 0Ω (ohms). Troubleshoot to identify the malfunction in the line. If there is no conductive path, the multimeter will not show any feedback.

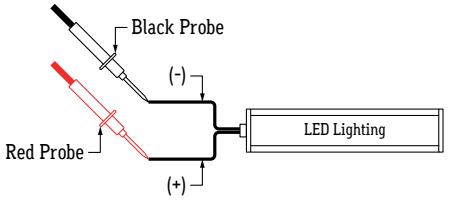

5. Touch the red probe to the fixture extrusion and the black probe to the positive (+) wire. If a conductive path is formed between the extrusion and the positive wire, the multimeter will beep, flash, or read 0Ω (ohms). Troubleshoot to identify the malfunction in the line. If there is no conductive path, the multimeter will not show any feedback.

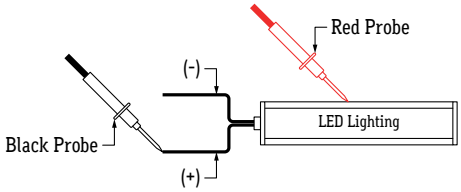

6. Touch the red probe to the fixture extrusion and the black probe to the negative (-) wire. If a conductive path is formed between the extrusion and the negative wire, the multimeter will beep, flash, or read 0Ω (ohms). Troubleshoot to identify the malfunction in the line. If there is no conductive path, the multimeter will not show any feedback.

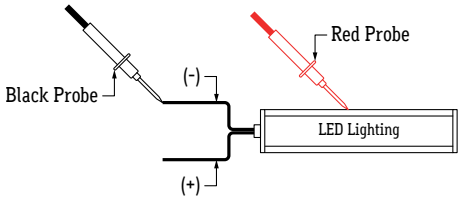

7. Set voltmeter to DC voltage and test power source. Confirm the correct voltage before connecting lighting to power source. If voltage reading is more than 1 volt higher than the marked output voltage, there is a problem with the power source or driver.

8. Connect power connector to power source. If LEDs do not turn on, flip polarity (+ -) or power source connection to power connector.

CALIFORNIA ACCENT LIGHTING, INC.
2820 E. Gretta Lane, Anaheim, CA 92806
ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com

© CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.

alumLEDs™ Manufactured in the U.S.A.